



Instructions

Before using **Smoke Sabre™** read the warnings and instructions for use on the can.

- Remove the label from top
- Press the release button **A** as shown below
- Flick your wrist **B**, or gently pull the sabre, to extend fully
- Hold the can vertically and release only a 0.5 – 1 second burst of aerosol, repeating every 10 seconds as necessary
- If the detector fails to respond it may be faulty
- Do not flick / extend sabre at other people
- Do not remove sabre from can



detectortesters
testing technology from No Climb